


Charging Instructions

by using Blink International App




1.  **Blink International** AutoEnterprise Download Blink International application for Android or IOS.

2. Open the application & press Registration.

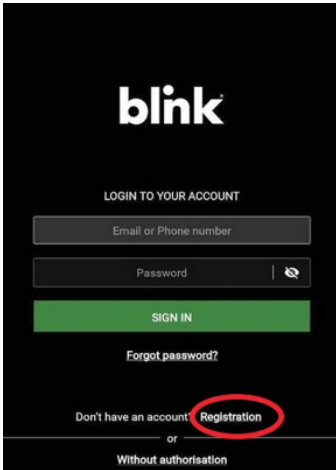

3. Fill in the fields as they appear in the image below and then press REGISTER.

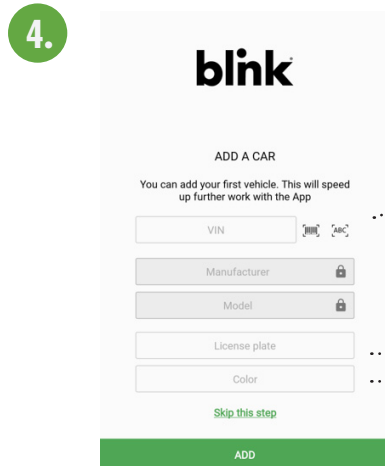

Enter the **VIN** number of your vehicle. VIN number is written on your car licence.

Enter the license plate of your vehicle.


Enter the color of your vehicle.


Press **ADD** to confirm and apply the information you have filled in.

5. a. To start a charging session, select at the map appeared the charging point at which you would like to charge your vehicle. After that, choose any available socket.



b. Wait until charger's LEDs get yellow. After that connect the cord to the vehicle's inlet. The socket gets blue and the charging session begins!

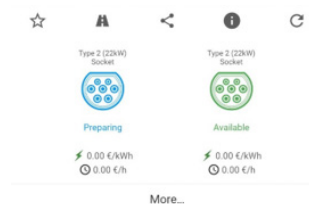


6. To finish the charging session, press the icon  which appears on the display of your device and then release the cord from your vehicle.

Charging Instructions

by using RFID Card

blink

1. Tap your RFID card to the point indicated on the surface of the charger.
Alternatively, select the charger and socket via Blink International application.
2. Wait until the LED lights turn into yellow.
3. Insert the charging cable into the vehicle socket. In a few seconds, the LED lights turn from yellow to blue.
4. To complete the charging, tap the RFID again or disconnect the vehicle through the application by clicking the icon .

You can also consult the tutorial video on www.blinkcharging.gr

To become a **Blink Member** or for more information, please visit www.BlinkCharging.gr call +30 210 7232862 or email Support@BlinkCharging.gr

